

## **IO CONNECTION BOX FOR THE BRADY FR22 READER**

The IO Connection Box offers a robust and flexible connection of external devices (e.g. lights, buzzers) and triggering sources (e.g. sensors, buttons) to the FR22 and FR22 Lite RFID readers.


It is connected to the mini IO port of the RFID reader via a provided cable, providing easy access to the pins of the IO port and adding two relays.





- Easy access to the IO pins on the FR22 and FR22 Lite
- LED indicators
- 2 opto-isolated inputs
- 2 opto-isolated outputs or 2 relay outputs (configurable with a switch)



## **DIMENSIONS (MM)**



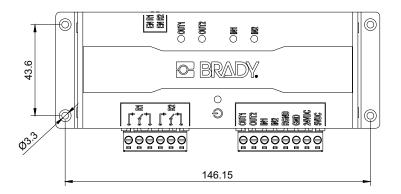



## ELECTRICAL SPECIFICATIONS

Signal name	Voltage MIN (V)	Voltage NOM (V)	Voltage MAX (V)	Conditions
GND		0		
RGND		0		
OUT1-2, high (open collector)			30	External 10k pull-up
OUT1-2, low (open collector)		0	0.6	Max 25mA / 150mW
IN1-2, high	3		30	
IN1-2, low	0		0.7	
5VDC/24VDC		5/24		5V <450mA or 24V <100mA
R1-2			30	Max 3A current

ENVIRONMENT			
Operating Temperature	-20°C - 50°C		
Ingress Protection Rating	IP20		
SIZE AND WEIGHT			
Dimensions	155.2 mm (W) x 25.55 mm (H) x 66.75 mm (D)		
Weight (kg)	160 g		